

# HERO3<sup>+</sup>

SILVER EDITION

# / Hello

Congratulations on your new HERO3+. This Quick Start Guide will help you learn the basics of capturing life's most incredible moments with your GoPro.

## JOIN THE GOPRO MOVEMENT



[facebook.com/GoPro](https://facebook.com/GoPro)



[youtube.com/GoPro](https://youtube.com/GoPro)



[twitter.com/GoPro](https://twitter.com/GoPro)


 


[instagram.com/GoPro](https://instagram.com/GoPro)

# / Getting Started

**1**


## REMOVE CAMERA FROM HOUSING

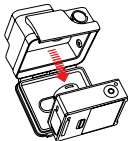

**2**


## REMOVE CAMERA SIDE DOOR AND INSERT MICROSD CARD

 *(Class 10 required, sold separately)*




**3**
 
## REMOVE CAMERA BACK DOOR AND INSERT BATTERY



**4**

## CHARGE BATTERY USING INCLUDED USB CABLE

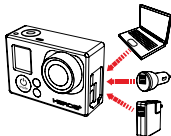

## / Camera Essentials

Shutter/Select Button [  ]

Camera Status Light [red]


LCD Status Screen

Power/Mode Button [  ]

Wi-Fi On/Off Button [  ]

Wi-Fi Status Light [blue]

Camera Status Light [red]

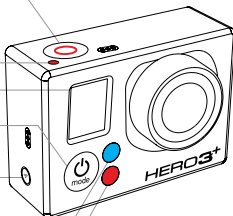


### POWERING CAMERA ON AND OFF


To power **ON**

Press the Power/Mode Button [  ].

To power **OFF**

Press and hold the Power/Mode Button [  ] for two seconds.

# / Selecting Camera Modes

Turn camera **ON** and repeatedly press the Power/Mode Button [  ] to cycle through camera modes.



## VIDEO

---

Record video



## PHOTO

---

Capture a single photo



## BURST PHOTO

---

Capture photo bursts



## TIME LAPSE

---

Shoot a series of photos at set time intervals



## SETTINGS

---

Adjust camera settings, resolution and more



## PLAYBACK\*






---


View your videos and photos on a TV or LCD Touch BacPac™

*\*Playback only appears when camera is connected to a TV or LCD Touch BacPac (optional accessory, sold separately).*

# / Camera Settings\*


## TO ADJUST CAMERA SETTINGS:


1. Press the Power/Mode Button [  ] to cycle to Settings mode [  ].
2. Press the Shutter/Select Button [  ] to enter the Settings menu.
3. Press the Power/Mode Button [  ] to cycle through options.
4. Press the Shutter/Select Button [  ] to select desired option.

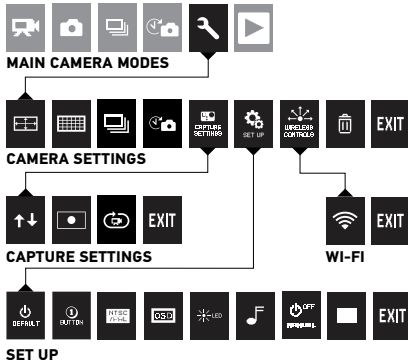


\*For a full explanation of camera settings, see the User Manual.

## / Capturing Video + Photos

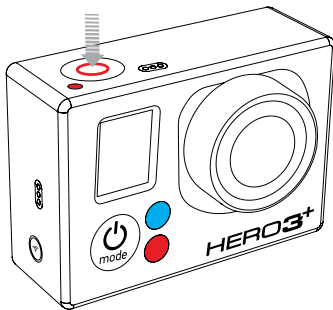

Press the Shutter/Select Button  
[  ] to start/stop recording or  
take a photo.

You can change video and photo  
settings in the Settings menu [  ].

## / Default Video + Photo Settings


### DEFAULT VIDEO SETTING: 960P60 FPS

Your camera is set to 960p60 fps, which delivers a large viewing area and smooth footage. It's great for gear- and body-mounted shots.


If you want to experiment with other video settings, you can find more info in the Camera Settings section of the User Manual.

---

### DEFAULT PHOTO SETTING: 10MP

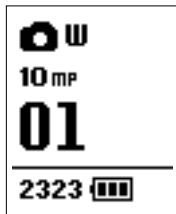

Your camera is set to 10MP resolution, allowing you to capture stunning high-resolution photos.

You can adjust photo resolution in the Settings menu [  ].



## / Connecting to the GoPro App

The GoPro App lets you control your camera remotely using a smartphone or tablet. Features include full camera control, live preview, playback and sharing of select content and more\*.

1. Download the GoPro App to your smartphone or tablet at the Apple App Store, Google Play or Windows Phone marketplace.
2. Press the Power/Mode Button [  ] to power camera **ON**.
3. Press the Wi-Fi On/Off Button [  ] twice, then press the Shutter/Select Button [  ] to enter the **Wi-Fi** menu [  ].
4. Press the Power/Mode Button [  ] to cycle to **GoPro App**, then press the Shutter/Select Button [  ] to select it.
5. In your smartphone or tablet's Wi-Fi settings, connect to the network called "GOPRO-BP" followed by a series of numbers/letters. Enter the password "goprohero"\*\*\*.
6. Open the GoPro App on your smartphone or tablet.



*\*For device compatibility, please visit [gopro.com](http://gopro.com).*

*\*\*This is the default network name and password. You can customize this if you update your camera software at [gopro.com/update](http://gopro.com/update).*

## / Playing Back Videos + Photos

There are several ways to play back your videos and view your photos.



### **LCD TOUCH BACPAC™**

Removable LCD touch screen  
(sold separately).



### **TV**

Connect via Micro HDMI, Composite  
or Combo Cable (sold separately).



### **GOPRO APP**

Play back and share select content  
using your smartphone or tablet.



### **COMPUTER**


 
Connect via included USB cable.

# / Mounting Your Camera

Attach your HERO3+ to helmets, gear and equipment.



## FLAT SURFACE MOUNTING

---

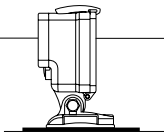

## CURVED SURFACE MOUNTING

 ---

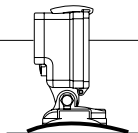


**NOTE:** To remove adhesive mounts, heat with a hair dryer then peel off mount.

## / Mounting Your Camera (Continued)


### VERTICAL MOUNTING

---

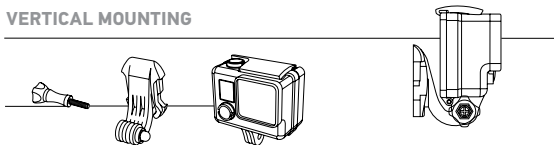

### SIDE MOUNTING

---

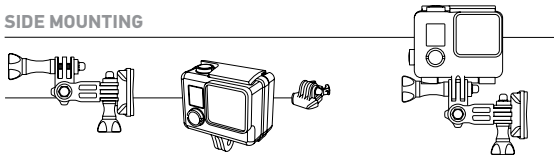

## / Optional Accessories\*



LCD Touch BacPac™



Wrist Housing



Wi-Fi Remote



Chesty  
(Chest Harness)



The Frame



Head Strap + QuickClip



Jaws: Flex Clamp



Surfboard Mounts



Handlebar/Seatpost/  
Pole Mount

See more at **[gopro.com](http://gopro.com)**

*\*Optional accessories sold separately*

# / Help + Resources

## **CUSTOMER SUPPORT**

GoPro is dedicated to providing the best possible service. To reach GoPro Customer Support, visit **[gopro.com/support](https://gopro.com/support)**.

## **GOPRO TUTORIAL VIDEOS**

How-to tutorials, pro tips and tricks to help you make the most of your GoPro products. Visit **[youtube.com/goprotutorials](https://youtube.com/goprotutorials)**.

## **CAMERA SOFTWARE UPDATES**

To get the latest features and best performance from your HERO3+, make sure you're using the most current camera software. To check for available updates and download the latest camera software, visit **[gopro.com/update](https://gopro.com/update)**.

## **REGULATORY INFORMATION**

To see the complete list of country certifications, refer to the WARRANTY + DISCLAIMERS document included with this product.

