

# HERO3

WHITE EDITION

## / Hello

Congratulations on your new HERO3. This Quick Start Guide will help you learn the basics of capturing life's most incredible moments with your GoPro.

### JOIN THE GOPRO MOVEMENT



[facebook.com/GoPro](https://facebook.com/GoPro)



[youtube.com/GoPro](https://youtube.com/GoPro)



[twitter.com/GoPro](https://twitter.com/GoPro)


 


[instagram.com/GoPro](https://instagram.com/GoPro)

# / Getting Started

**1**


## REMOVE CAMERA FROM HOUSING

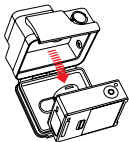

**2**

## REMOVE CAMERA SIDE DOOR AND INSERT MICROSD CARD

 *(sold separately)*




**3**

## REMOVE CAMERA BACK DOOR AND INSERT BATTERY




**4**

## CHARGE BATTERY USING INCLUDED USB CABLE

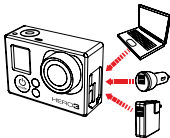


## / Camera Essentials

Shutter/Select Button [  ]

Camera Status Light [red]


LCD Status Screen

Power/Mode Button [  ]

Wi-Fi On/Off Button [  ]

Wi-Fi Status Light [blue]

Camera Status Light [red]

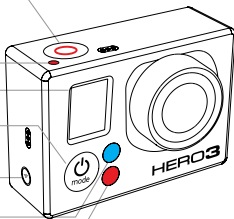


### POWERING CAMERA ON AND OFF


To power **ON**

Press the Power/Mode Button [  ].

To power **OFF**

Press and hold the Power/Mode Button [  ] for two seconds.

## / Selecting Camera Modes

Turn camera **ON** and repeatedly press the Power/Mode Button [  ] to cycle through camera modes.



### VIDEO

---

Record video



### PHOTO

---

Capture a single photo



### BURST PHOTO

---

Capture photo bursts



### TIME LAPSE

---

Shoot a series of photos at set time intervals



### SETTINGS

---

Adjust camera settings, resolution and more



### PLAYBACK\*






---


View your videos and photos on a TV or LCD Touch BacPac™

*\*Playback only appears when camera is connected to a TV or LCD Touch BacPac (optional accessory, sold separately).*

# / Camera Settings\*


## TO ADJUST CAMERA SETTINGS:


1. Press the Power/Mode Button [  ] to cycle to Settings mode [  ].
2. Press the Shutter/Select Button [  ] to enter the Settings menu.
3. Press the Power/Mode Button [  ] to cycle through options.
4. Press the Shutter/Select Button [  ] to select desired option.

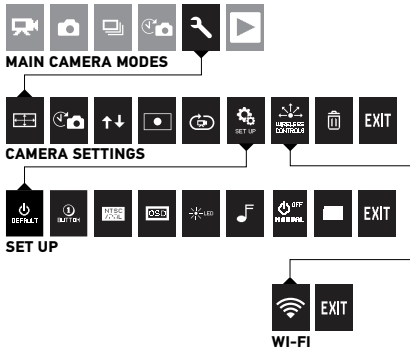


\*For a full explanation of camera settings, see the User Manual.

## / Capturing Video + Photos

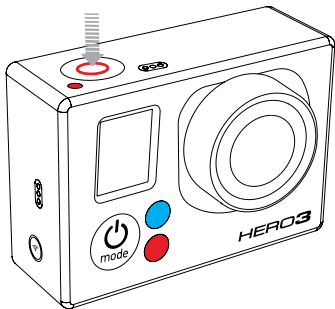

Press the Shutter/Select Button [  ] to start/stop recording or take a photo.

You can change video and photo settings in the Settings menu [  ].

## / Default Video + Photo Settings

### **DEFAULT VIDEO SETTING: 960P30 FPS**


Your camera is set to 960p 30 fps, which delivers a large viewing area and smooth footage. It's great for a wide range of shooting scenarios, including gear- and body-mounted shots.

If you want to experiment with other video settings, you can find more info in the Camera Settings section of the User Manual.

---

### **DEFAULT PHOTO SETTING: 5MP**

Your camera is set to 5MP resolution.

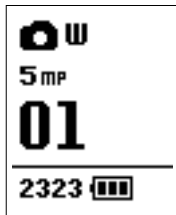



## / Connecting to the GoPro App

The GoPro App lets you control your camera remotely using a smartphone or tablet. Features include full camera control, live preview, playback and sharing of select content and more\*.

1. Download the GoPro App to your smartphone or tablet at the Apple App Store, Google Play or Windows Phone marketplace.
2. Press the Power/Mode Button [  ] to power camera **ON**.
3. Press the Wi-Fi On/Off Button [  ] twice, then press the Shutter/Select Button [  ] to enter the **Wi-Fi** menu [  ].
4. Press the Power/Mode Button [  ] to cycle to **GoPro App**, then press the Shutter/Select Button [  ] to select it.
5. In your smartphone or tablet's Wi-Fi settings, connect to the network called "GOPRO-BP" followed by a series of numbers/ letters. Enter the password "goprohero"\*\*\*.
6. Open the GoPro App on your smartphone or tablet.



\*For device compatibility, please visit [gopro.com](http://gopro.com).

\*\*\*This is the default network name and password. You can customize this if you update your camera software at [gopro.com/update](http://gopro.com/update).

## / Playing Back Videos + Photos

There are several ways to play back your videos and view your photos.



### **LCD TOUCH BACPAC™**

Removable LCD touch screen  
(sold separately).



### **TV**

Connect via Micro HDMI, Composite  
or Combo Cable (sold separately).



### **GOPRO APP**

Play back and share select content  
using your smartphone or tablet.



### **COMPUTER**


 
Connect via included USB cable.

# / Mounting Your Camera

Attach your HERO3 to helmets, gear and equipment.



## FLAT SURFACE MOUNTING

---

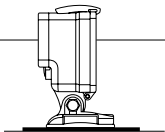

## CURVED SURFACE MOUNTING

 ---

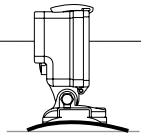

**NOTE:** To remove adhesive mounts, heat with a hair dryer then peel off mount.

# / Help + Resources

## **CUSTOMER SUPPORT**

GoPro is dedicated to providing the best possible service. To reach GoPro Customer Support, visit [\*\*gopro.com/support\*\*](https://gopro.com/support).

## **GOPRO TUTORIAL VIDEOS**

How-to tutorials, pro tips and tricks to help you make the most of your GoPro products. Visit [\*\*youtube.com/goprotutorials\*\*](https://youtube.com/goprotutorials).

## **CAMERA SOFTWARE UPDATES**

To get the latest features and best performance from your HERO3, make sure you're using the most current camera software. To check for available updates and download the latest camera software, visit [\*\*gopro.com/update\*\*](https://gopro.com/update).

## **REGULATORY INFORMATION**

To see the complete list of country certifications, refer to the WARRANTY + DISCLAIMERS document included with this product.

