

# simplehuman<sup>®</sup>

## quick start guide



#### warranty

Your simplehuman® sensor soap pump is backed by the added security of a 2-year warranty. For the duration of the warranty, simplehuman® will repair or replace any defective item free of charge. Please visit www.simplehuman.com/service to register and for full terms and restrictions.

### setting up your sensor soap pump

- 1. Remove the battery cover at the base of the sensor soap pump and insert four "AA" batteries into the battery compartment.
- 2. To fill the soap pump, twist off the round lid (counterclockwise) on the top of the pump and fill the soap chamber with liquid soap. Replace the lid and tighten it securely.
- **3.** Your sensor soap pump also has an optional timer setting. To activate timer feature, please see the "built-in timer" section on the next page.

#### using your sensor soap pump



1 2 3 4

- 1. To choose a soap volume setting, turn the dial at the base. The four different settings range from smaller to larger amounts.
- We recommend that you use settings 1-2 for most liquid hand soaps, and settings 3-4 for lotions or very thick liquid soaps.
- **2.** [NOTE: For first time use, prime the soap pump by pressing the continuous dispensing button until soap starts to dispense.]
- Place your hand under the sensor. The soap pump will automatically dispense the selected amount of soap.
- **3.** To change the soap volume, turn the dial at the base to the amount you prefer.
- **4.** To turn off the soap pump, turn the dial all the way to the "OFF" position.

### continuous dispensing

For continuous dispensing, press the button at the top of the soap pump. Hold the button down to dispense soap continuously for bigger chores such as doing the dishes.

#### built-in timer

Scrubbing your hands for at least 20 seconds is recommended for germ-free hands. The sensor soap pump has an optional built-in timer that produces a blinking light for 20 seconds, so you'll know to keep lathering until the light stops blinking.

#### how to turn on the timer

- 1. Turn the dial at the base to the "OFF" position.
- **2.** While holding down the continuous dispensing button, turn the dial at the base to any of the four volume settings. This will activate the 20-second timer.

#### how to turn off the timer

- **1.** Turn the dial to the "OFF" setting. This will reset the soap pump.
- **2.** Turn the dial back to any of the four volume settings. The timer is now deactivated until you turn it on again.

### low battery alert

When battery power is low, the sensor soap pump will alert you by flashing the light 3 times intermittently. The soap pump will also stop dispensing soap until the batteries are replaced.